

LED High Bay Luminaire

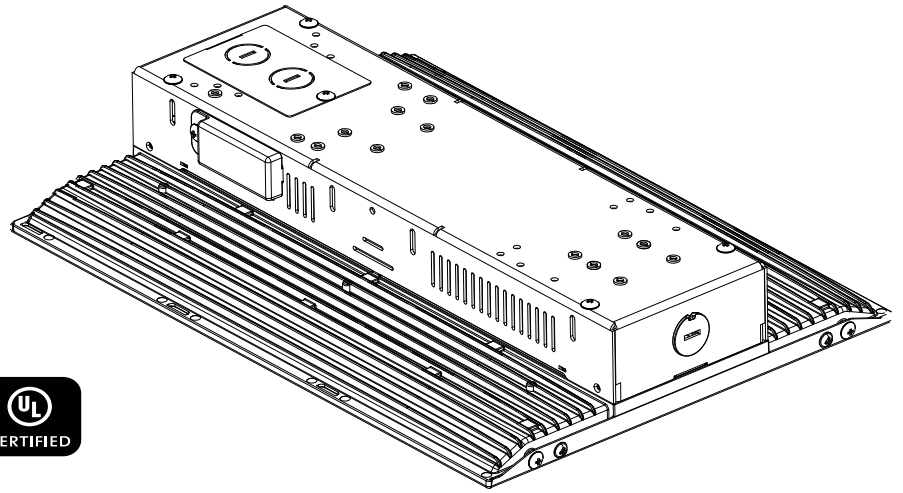

CERTIFIED

CAUTION:
1. Read all instructions before starting installation.
2. This product must be installed in accordance with the applicable installation codes by a qualified electrician familiar with the construction and operation of the product and the hazards involved.
3. Disconnect power at circuit breaker of fuse before starting installation.
4. To avoid injury, wear gloves during installation.
5. To reduce the risk of electrical shock and product damage, do not install this luminaire during rain or other storms.
6. Do not test luminaire using an electric generator before installation.


Installation Instruction

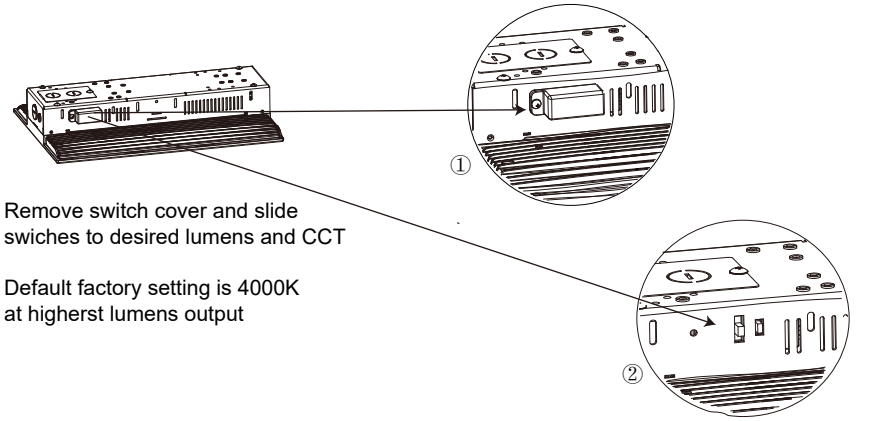

Remove switch cover and slide swiches to desired lumens and CCT

Default factory setting is 4000K at higherst lumens output

Wiring Diagram

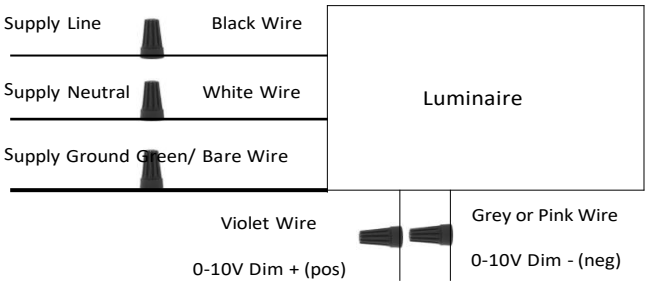


For dimming wires, use class 1 wiring methods.
Cap dimming wires (separately) if not used.

SAVE THESE INSTRUCTIONS


Installation Instruction

Chain and hook pendant mount

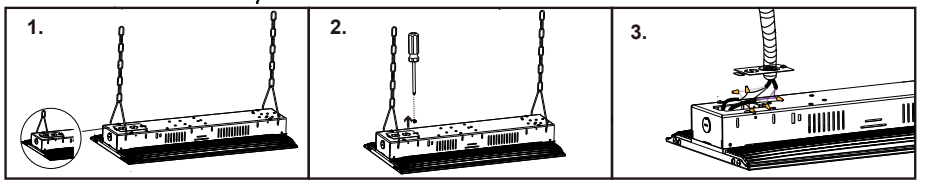


1. Take out the lamp and installation accessories.(“V” Hook wire*2 / hanging chain*2)
2. Attach the “V” hooks to the chain then attache the “V” hooks on the liminiare slots and hang the chain to a structure that can sustain the luminiare whight.
3. Attach the conduit to the luminiare wiring box door, make the electrical connections according with the wiring diagram and secure the wiring box door to the luminiare to complete installation

Stem Pendant mount (purchased separately)

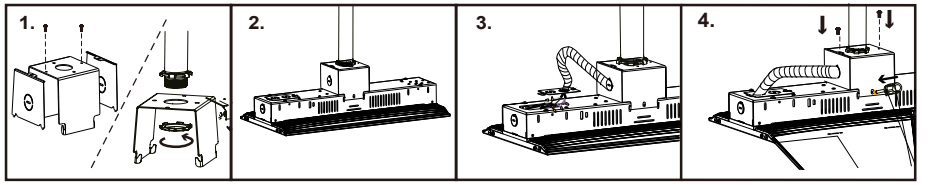

1. Attach stem conduit to the stem mount bracket
2. Secure stem mount braket into luminiare slots.
3. Attach flexible conduit conduit to the luminiare wiring box door, make the electrical connections according with the wiring diagram, then secure the wiring box door to the luminiare, the stem mount braket doors and stem mount braket to luminiare to complete installation


Ceiling mounting (purchased separately)

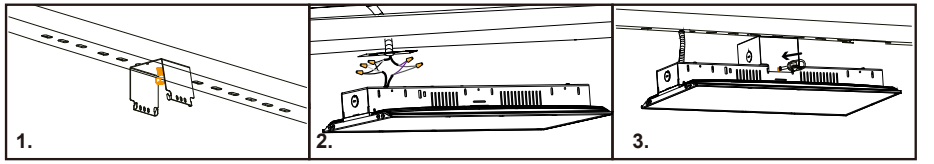

1. Attach the suface mount braket to a structure that can sustain the luminiare whight.
2. Attach the conduit to the luminiare wiring box door, make the electrical connections according with the wiring diagram and secure the wiring box door to the luminiare.
3. Secure surface mount braket to luminiare to complete unstallation.

Accessories installation steps

Installation of protective wire guard (purchased separately)

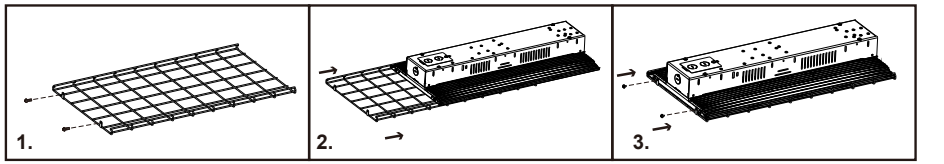

1.Take out the lamp mounting fittings and mounting screws.(Screw*4)
2. Slide the protective wire guard from the side .
3. After the protective wire guard is assembled secure it with M4 screws.